

# FREESTANDING Wood Stove SPECIFICATIONS



**NOTICE: Specifications are for reference only and shall not be used for actual installation. Use installation manual for actual specifications.**

**\$160 STRIKER**      **SS210 PERFORMER**      **ST210 PERFORMER**      **\$260 LEGACY**      **ST310 CANYON**

WIDTH	23 1/2"	25 1/4"	25 1/4"	28"	28 1/2"
HEIGHT: CASCADE LEGS (STEEL LEGS)	27 1/2"	27 1/2"	30 3/8"	33"	38 1/2"
HEIGHT: OLYMPIC LEGS (CAST LEGS)	27 1/2"	27 1/2"	30 3/8"	33"	38 1/2"
HEIGHT: PEDESTAL	31"	31"	33 7/8"	36 1/2"	41 1/2"
DEPTH (DOOR OPENING TO REAR SHIELD)	17 3/4"	21 3/4"	21 3/4"	21 1/4"	23 1/2"
APPROXIMATE WEIGHT: WITH LEGS	316 lbs.	440 lbs.	442 lbs.	446 lbs.	525 lbs.
APPROXIMATE WEIGHT: WITH PEDESTAL	310 lbs.	432 lbs.	436 lbs.	440 lbs.	519 lbs.
STOVE PIPE DIAMETER	6"	6"	6"	6" or 8" *	6" or 8" *

\* Consult your dealer or professional installer for recommended chimney sizes for your application. S260/ST310 requires reducer when using 6"

**\$160 STRIKER**      **SS/ST210 PERFORMER**      **\$260 LEGACY**      **ST310 CANYON**

**CLEARANCES** See figures 1, 2, & 3 (below). Any reduction of listed clearances must be done as per NFPA 211. Consult your local building codes official.

	6 Inch			6 Inch			6 Inch		8 Inch		6 Inch		8 Inch	
	Single Wall Connector	Single Wall with shield Connector	Double Wall Connector	Single Wall Connector	Single Wall with shield Connector	Double Wall Connector	Single Wall Connector	Double Wall Connector	Single Wall Connector	Double Wall Connector	Double Wall Connector	Double Wall Connector	Double Wall Connector	
<b>A=</b> Flue Collar to Back Wall	16"	10"	10"	16"	10"	10"	18"	13"	23"	16"	12"	12"		
<b>B=</b> Stove to Back Wall	14"	8"	8"	14"	8"	8"	15 1/2"	10 1/2"	20 1/2"	13 1/2"	9 1/4"	9 1/4"		
<b>C=</b> Flue Collar to Side Wall	21"	18"	18"	24"	24"	18"	26"	23"	28"	25"	24"	24"		
<b>D=</b> Stove to Side Wall	12 1/2"	9 1/2"	9 1/2"	14 1/2"	14 1/2"	8 1/2"	16"	13"	18"	15"	14"	14"		
<b>F†=</b> Stove Corner to Wall	9 3/4"	5 1/2"	5 1/2"	9"	9"	6"	11"	11"	13"	12"	7 1/4"	7 1/4"		
<b>G=</b> Flue Collar to Wall	18"	13 1/2"	13 1/2"	18"	18"	15"	21"	21"	23"	22"	18"	18"		

### HEARTH PROTECTION

<b>K (2)=</b> Front of Stove	16"	16"	16"	16"	16"	16"	16"	16"	16"	16"	20"	20"
<b>L*=</b> Measured from Door Opening	8"	8"	8"	8"	8"	8"	8"	8"	8"	8"	8"	8"
<b>E (1) =</b> Back of Stove Heat Shield	8"	6"	6"	6"	6"	6"	6"	6"	6"	6"	6 1/2"	6 1/2"
<b>H=</b> Pad Depth Minimum (E + Depth of Stove + K)	40"	40"	40"	44"	44"	44"	44"	44"	44"	44"	50"	50"
<b>J=</b> Pad Width Minimum (Door Opening Width + L* each side)	36"	33 1/2"	33 1/2"	35"	35"	35"	38"	38"	38"	38"	38"	38"
<b>I=</b> Pad Depth to Back Wall (B - E + H)	48"	42"	42"	52"	46"	46"	53 1/2"	48 1/2"	58 1/2"	51 1/2"	52 3/4"	52 3/4"
<b>T=</b> Pad Depth to Corner	59"	53"	53"	63"	63"	59"	66 1/2"	66 1/2"	69"	68"	67 3/4"	67 3/4"

### ALCOVE (MUST USE DOUBLE WALL AIR COOLED CONNECTOR PIPE)

<b>X=</b> Minimum Width	N/A	N/A	44"	N/A	N/A	48"	N/A	54"	N/A	64"	56 1/2"	56 1/2"
<b>Y=</b> Maximum Depth	N/A	N/A	48"	N/A	N/A	48"	N/A	48"	N/A	48"	48"	48"
<b>Z=</b> Minimum Height	N/A	N/A	72"	N/A	N/A	72"	N/A	84"	N/A	84"	72"	72"

Country freestanding stoves are tested to U.L. 1482. CLEARANCES TO FLUE ARE FROM THE STOVES FLUE COLLAR TO COMBUSTIBLES.

Note: Country Stoves, Inc. reserves the right to improve or alter its products at any time without notice.


### IMPORTANT NOTES:

In mobile homes Double Wall connector pipe must be used and an Outside Air Kit (OAK) is required. In mobile home installations not for use in bedroom.


(1) E<sup>(1)</sup> = 6" to the rear of the stove heat shield or 8" to the rear of the firebox.

(2) For each 2" the hearth is raised above flooring, hearth requirement may be reduced by 2", 16" minimum all installations.


SIDE WALL/BACK WALL FIG. 1

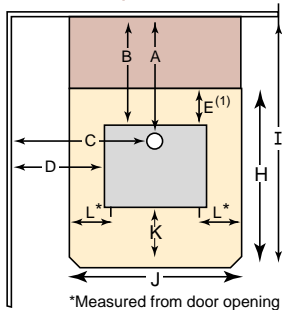

ALCOVE FIG. 2

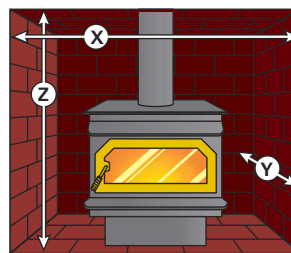

CORNER FIG. 3

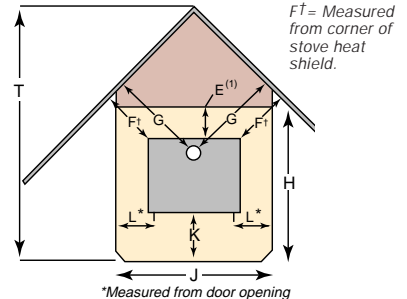

# COUNTRY STOVES

A LIFETIME OF WARMTH

www.countrystoves.com

Country Stoves, Inc., P.O. Box 959, Auburn, WA 98071-0959

